

INSTALLATION INSTRUCTIONS

Sentry Access Control System - Adjustable Stand

Product Codes: **SENTRY/STD**

Safety Warning




- The installation should be carried out by a qualified electrician in compliance with the current edition of the IEE Wiring Regulations.
- Prior to installation, carry out the necessary risk assessment considering the people who could be at risk, the level of risk and the precautions required to control the risk
- Ensure that the circuit supply is isolated either by the circuit supply fuse being removed or the applicable circuit breaker being turned off before installation or any maintenance.
- Check the total load on the circuit ensuring the luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
- Long-term use and voltage fluctuations can reduce the life span of the fitting.
- If the fitting incorporates control gear, ensure careful sizing to avoid instances of nuisance tripping of the protective device used in the installation.
- Follow the provided installation instructions, using the fixings supplied or recommended.
- Keep out of reach of children.



Specification



Box Contents -
1 x Sentry Adjustable Stand

Dimensions:	L: 400 x W: 270mm Height: 1200-1720mm
Material:	Steel
Included:	Metal Base, adhesive Feet, Circular Plate, Stand, Screws & Nuts, X- Bracket, Small Bracket & Safety Rod

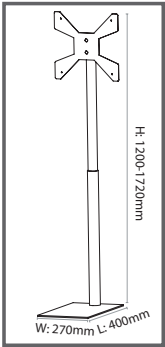


Installation Instructions - Base

  1. Stick the adhesive feet to the bottom of the metal base.
2. Place the circular plate between the stand and base, make sure all the holes align.
3. Insert screws from below and fasten together.

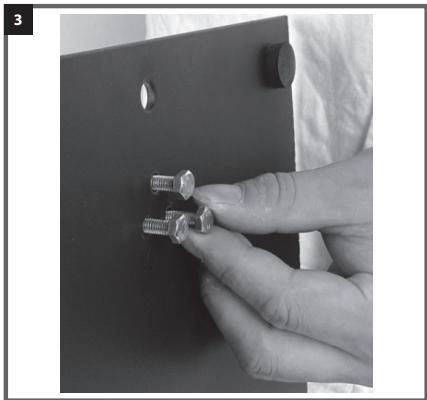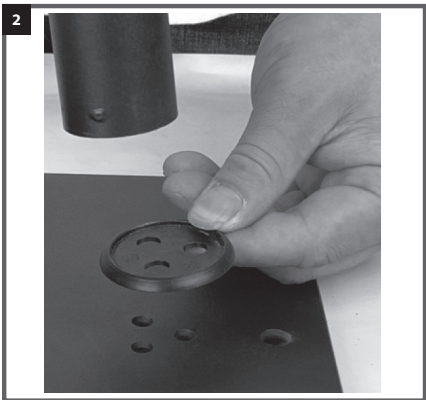

Installation Instructions - Panel Fixture

 1. Assemble the X Bracket with the small Bracket using screws and nuts.

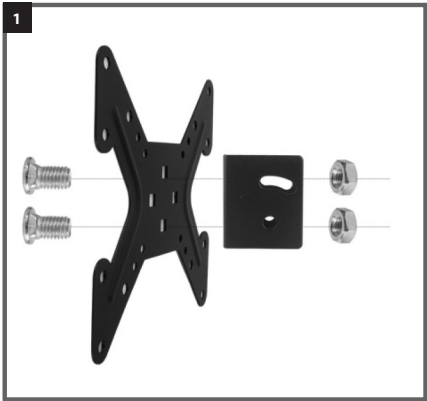

2. Screw together as shown below.



3. Mount the assembled bracket to the stand with the screws and nuts provided.



4. Raise stand to required height, tighten the knurled screw and insert the safety rod.



5. The stand is now complete and ready to accept the panel.



Guarantee

This product is guaranteed for a period of 3 years from the date of purchase. The guarantee is invalid in the case of improper use, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations (BS7671). The guarantee is also invalidated if the luminaire has been insulation tested. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.

Maintenance

- This fitting will require routine cleaning if used in adverse (dust, paint, welding, oils etc) environments. Do not use solvents, aggressive detergents or abrasives.

INS/COMMERCIAL/0005/SENTRY_STD/V3