

INSTALLATION INSTRUCTIONS

Sentry Access Control System - Hand Held Remote Control

Product Codes: **SENTRY/RCA**

Safety Warning




- The installation should be carried out by a qualified electrician in compliance with the current edition of the IEE Wiring Regulations.
- Prior to installation, carry out the necessary risk assessment considering the people who could be at risk, the level of risk and the precautions required to control the risk
- Ensure that the circuit supply is isolated either by the circuit supply fuse being removed or the applicable circuit breaker being turned off before installation or any maintenance.
- Check the total load on the circuit ensuring the luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
- Long-term use and voltage fluctuations can reduce the life span of the fitting.
- If the fitting incorporates control gear, ensure careful sizing to avoid instances of nuisance tripping of the protective device used in the installation.
- Follow the provided installation instructions, using the fixings supplied or recommended.
- Keep out of reach of children.



Specification

Box Contents -
1 x Sentry Remote Control

Dimensions:	L: 103 x W: 38 x D: 15mm
Material:	Polymer
Working Temperature:	Standard: -20°C - 45°C
Power Supply	AAA Battery x 2 (not supplied)
Communication Type	Wireless RF-2.4G
Control Distance	Up to 20m (without obstructions)
Control Parameters	The hand held remote can control any quantity of panels, limited only by distance and obstructions. Each panel can be controlled by a maximum of 4 hand held controllers.

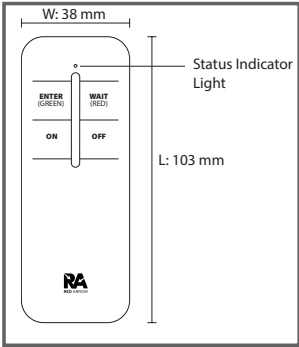

Button Specification

- To turn the panel on, press either the enter (green) or wait (red) button once.
- Enter (green) - Turn on the green light to display 'please enter.'
- Wait (red) - Turn on the red light to display 'please wait.'
- Status on/off - Turn the status indicator light on* or off. When turned on, the light displays red or green to show the current status of the panel.
- Panel off - Turn the panel off

*** Important - Turn off the status indicator light as soon as you have checked the panel status. Leaving the light on will drain the life of the batteries.**

Set up of Hand Held Remote Control with Panel(s) - Step One: Clear Code

- Isolate the power supply to the panel for 10 seconds.
- Reconnect the power and within 3 seconds press the wait (red) button on the remote control 5 times in quick succession.
- The panel will flash 6 times to confirm the code is cleared.

Set up of Hand Held Remote Control with Panel(s) - Step Two: Match Code

- Isolate the power supply to the panel for 10 seconds.
- Reconnect the power and within 3 seconds press the enter (green) button on the remote control 3 times in quick succession.
- The panel will flash 3 times to confirm the code is matched.

The remote can now be used to control the selected panel(s).

Guarantee

This product is guaranteed for a period of 3 years from the date of purchase. The guarantee is invalid in the case of improper use, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations (BS7671). The guarantee is also invalidated if the luminaire has been insulation tested. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.

Maintenance

- This fitting will require routine cleaning if used in adverse (dust, paint, welding, oils etc) environments. Do not use solvents, aggressive detergents or abrasives.
- When this fitting comes to the end of its life or you choose to replace it, please do not dispose of it with your normal waste. Please recycle where the facilities exist, check with your local authority for suitable options.

INS/COMMERCIAL/0005/SENTRY_RCA/V6



RED ARROW

Red Arrow Electrical Ltd
Cortonwood Drive, Brampton,
Barnsley, S73 0UF

T: 0800 195 0006
sales@redarrowelectrical.co.uk

redarrowelectrical.co.uk