

INSTALLATION INSTRUCTIONS

OLYMPUS COMPACT DOWNLIGHTS

Product Codes: **OLY165-CCT- OLY200-CCT - OLY230-CCT**

Safety Warning




- The installation should be carried out by a qualified electrician in compliance with the current edition of the IEE Wiring Regulations.
- Prior to installation, carry out the necessary risk assessment considering the people who could be at risk, the level of risk and the precautions required to control the risk
- Ensure that the circuit supply is isolated either by the circuit supply fuse being removed or the applicable circuit breaker being turned off before installation or any maintenance.
- Check the total load on the circuit ensuring the luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
- Long-term use and voltage fluctuations can reduce the life span of the fitting.
- If the fitting incorporates control gear, ensure careful sizing to avoid instances of nuisance tripping of the protective device used in the installation.
- Follow the provided installation instructions, using the fixings supplied or recommended.
- Keep out of reach of children.



Specification



Box Contents - Olympus downlight



Dimensions:	OLY165-CCT - Ø: 165 x D: 61 mm OLY200-CCT - Ø: 200 x D: 61 mm OLY230-CCT - Ø: 230 x D: 70 mm
Material:	Body: Spun-Aluminium. Diffuser: PC
Working Temperature:	-25°C to 45°C
Cut out Dimensions:	OLY165-CCT - 130-155mm OLY200-CCT - 160-185mm OLY230-CCT - 190-215mm
Included:	Remote driver with locking plug & socket connector

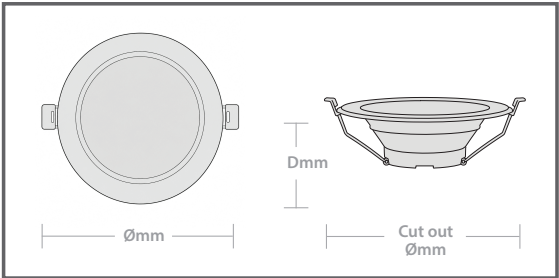

Installation Instructions

1. Cut out a hole in the ceiling to the appropriate size (refer to dimensions in the specification above). In the ceiling void, ensure there is at least 75mm clearance all around the fitting and at least 20mm above, to allow free air circulation. This fitting must not be covered with insulating material.
2. Pass mains supply through the cut out and connect to the LED driver observing the correct polarity Live (L) brown - Neutral (N) - Blue using a suitable housing (not supplied)
3. Select desired CCT using the switch on the rear of the downlight, also select desired power output using switch on the driver.

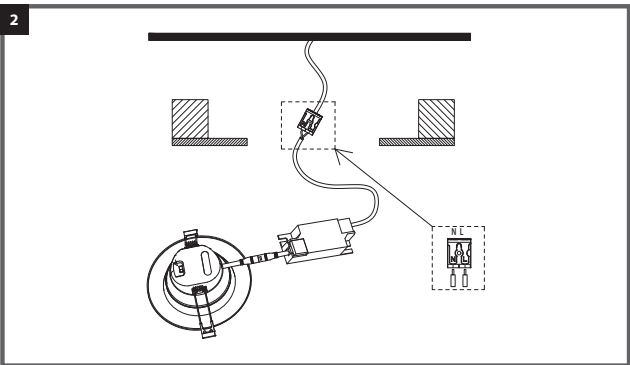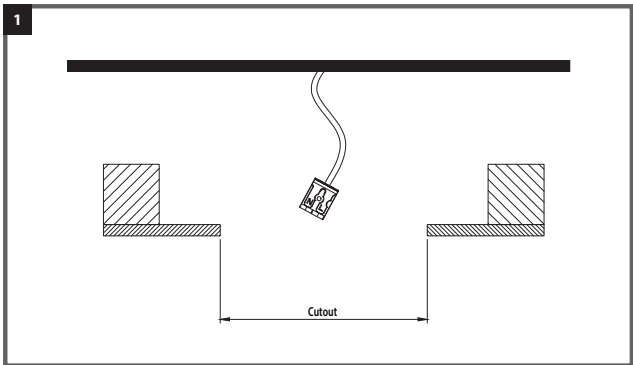

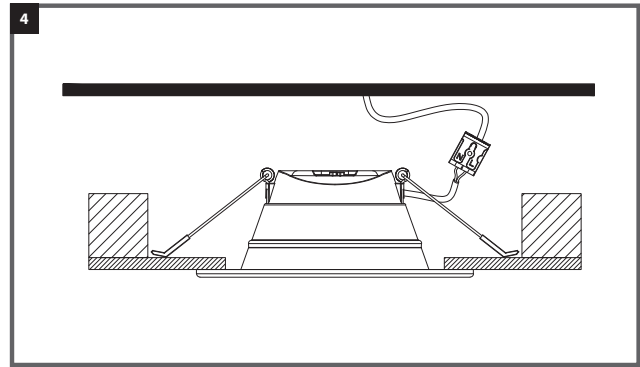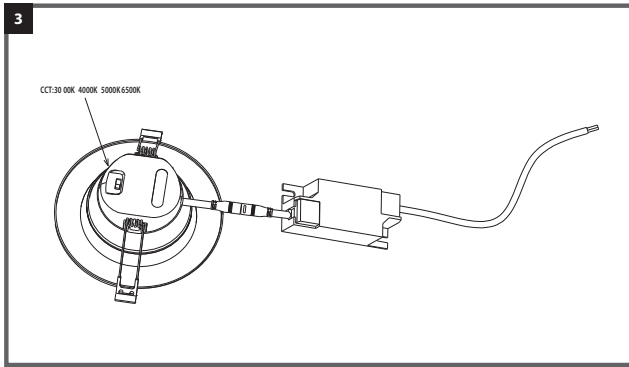

4. Pass the LED driver back through the cut out, retract the ceiling springs to allow them to pass through the cut out taking care not to release on fingers. Fit downlight in to cut out and release ceiling springs to secure in place.


Emergency conversion pack available for this product. Please contact sales team for more information.
T: 0114 279 8999 Email: sales@redarrowelectrical.co.uk

Warranty

This product has a warranty for a period of 5 years from the date of purchase. The guarantee is invalid in the case of improper use, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations (BS7671). The warranty is also invalidated if the luminaire has been insulation tested. Should this product fail during the warranty period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.

Maintenance

- This fitting will require routine cleaning if used in adverse (dust, paint, welding, oils, etc) environments. Do not use solvents, aggressive detergents or abrasives.
- The Driver in this product can be replaced at the end of life. This must be carried out by a professional, competent person.

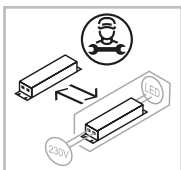

- When this fitting comes to the end of its life or you choose to replace it, please do not dispose of it with your normal waste. Please recycle where the facilities exist, check with your local authority for suitable options.

INS/DOWNLIGHTS/OLY/V1